



**SmartReceipt Subway Installation Guide -
For STAR TSP100 Printers**

Version 1.0

Oct. 2012



To enable SmartReceipt for Star TSP100 Series Printers, a printer configuration setting will need to change. This setting change, as described in **steps 1-5** below will configure the Star printer to emulate an Epson receipt printer.

1. Login to Windows as the Owner on the Point of Sale. From the Desktop, click **Start > Programs > Star Micronics > StarTSP100 > Configuration Utility**.
2. In the pop-up window, select **ESC/POS Mode** and click **OK**.

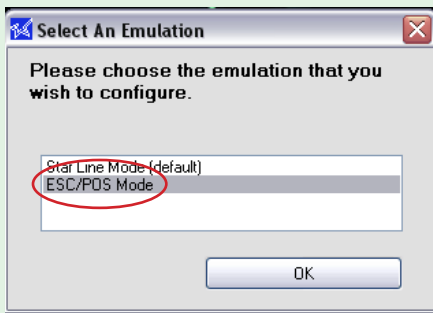


Figure 1

3. On the left hand side of the window, click **Print Job Routing**.
4. Ensure that **Enable ESC/POS Routing** is checked.

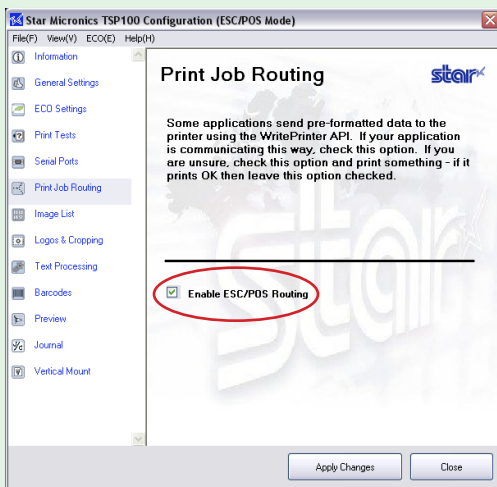


Figure 2

5. Click **Apply Changes** and **Close** to exit out of the Window.
6. Plug in the USB flash drive that contains the SmartReceipt installer, or download the installer from: <https://install.receipt.com/subway>
7. Double-click smartreceipt_4.0.exe. Click **Run** and then **Install** to begin the installation.
8. After the installation is complete, the SmartReceipt user interface will open automatically. Click on the field entitled 'Store Number' and type the store number* for which the installation is taking place at. Click **Save Store Number** and then **OK**.

* If you are installing SmartReceipt at a store with more than one register, append the letter 'b' to the store number on the second register. (ex: the first register would use Store Number 1234 and the second register would use 1234b)

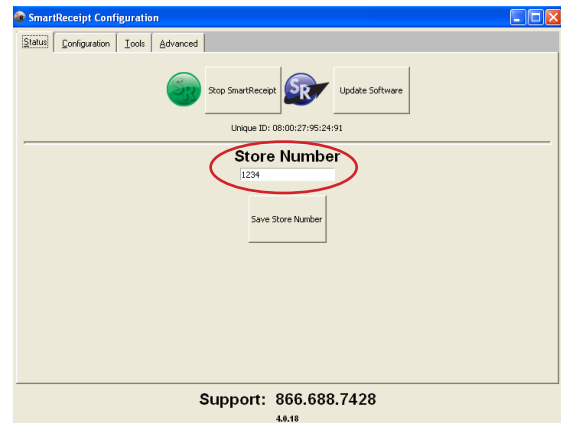


Figure 3

9. Click on the Configuration tab at the top of the window.
10. From the drop down entitled 'Select the Windows Printer Name,' select the name of the receipt printer.

- 11.** From the drop down entitled 'Printer Brand and Model,' select the model of your receipt printer.

** On most Star Printers, this can be found on the front of the printer. If not, the model can be found on a label on the bottom of the receipt printer.*

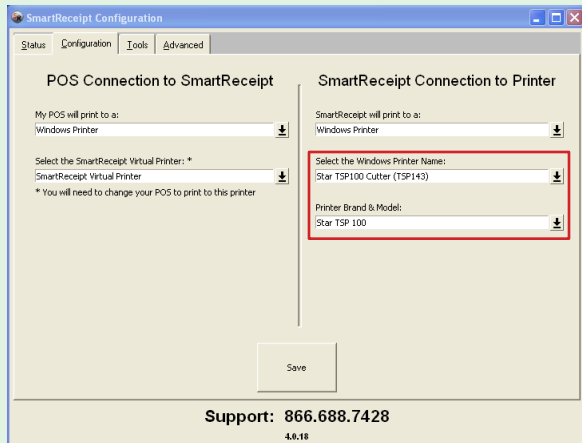


Figure 4

- 12.** Open Sub Shop 2000™. (Manager password required for steps 12-16).

Go to: **Manager Tasks > Files > Store Control > Printing Defaults.**

Ensure that the box for 'Print Sale Receipt' is checked and the box for 'Paper Saver Receipts' is NOT checked.

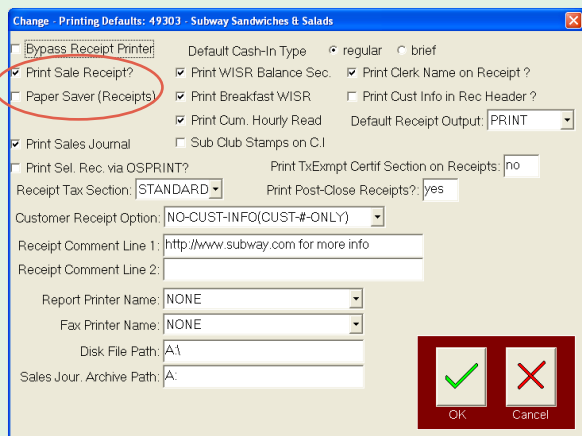


Figure 5

- 13.** Go to: **Manager Tasks > Files > Store Control > Printers / Pole Disp.**

From the drop down entitled, 'Printer-ID Receipt #1,' select **SmartReceipt Virtual Printer.**

- 14.** In the top right corner of the window, change the 'Type' to **Epson-Autocut.**

- 15.** If Printer-ID Drawer is set to 'PRINTER', click on this drop down and select your receipt printer name. If this is set to anything else, continue to step 16.

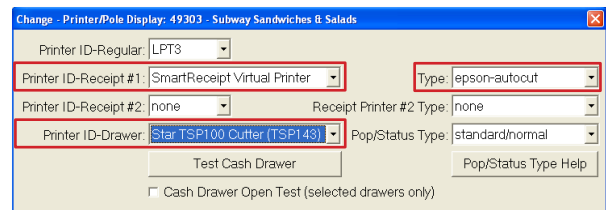


Figure 6

- 16.** Click **OK** and **Exit Sub Shop 2000™** to allow the changes to take affect. Re-open Sub Shop 2000™.

CONGRATULATIONS! You have successfully installed SmartReceipt. SmartReceipt will automatically activate. Please allow 5 minutes while SmartReceipt loads your marketing content (during this time, your receipt printing may be suspended)